

# MRS adjustable footplates

The MRS rail can be placed at different heights from the CMM's bed by using multiple MRS legs to provide the required clearance for long styli and extension bars.

By using the optional MRS adjustable footplates shown below, the MRS rail can also be placed at different positions on the CMM's bed thereby ensuring that a maximised working volume can be achieved.


The MRS adjustable footplates can be used with the MRS standard leg and the MRS heavy duty leg arrangements.

---

**NOTE:** The MRS adjustable footplates kit part number is A-4192-0702 and comprises two footplates.

---

Assemble as shown in the diagrams below:

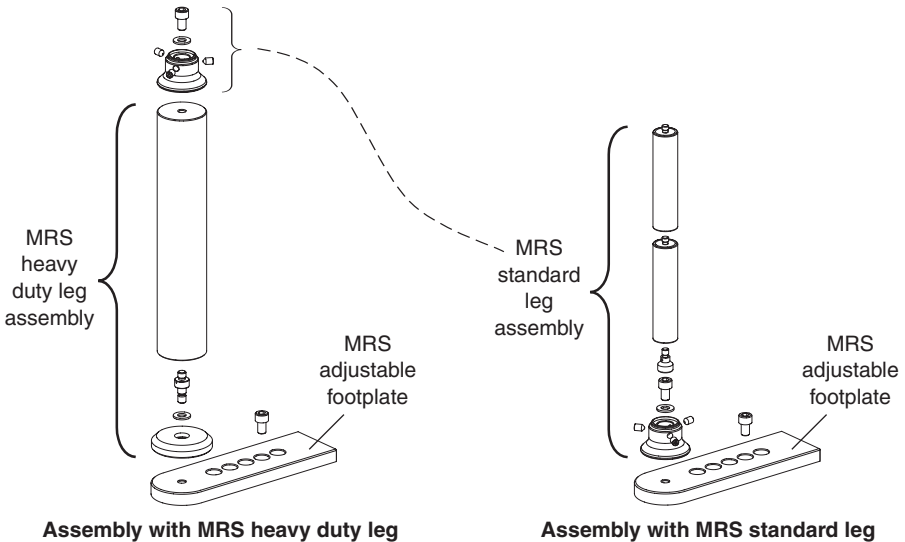

For worldwide contact details, please visit our main website at  
[www.renishaw.com/contact](http://www.renishaw.com/contact)